

Quick Start Guide



1). slide out the pre-installed mounting ring (with attached rear cover)

Carefully lift up on the bottom edge of the pre-installed mounting ring (with attached rear cover) and slide it down over the small retaining clip at the base of the Teleprompter body.

Note: Be careful not to put too much pressure on the retaining clip as it can break. Sometimes it helps to press down on the retaining clip in order to get the adapter to slide down over it.



2). remove the mounting ring

Unscrew the rear cover from the mounting ring in a counter clockwise direction.



3). choose the correct mounting ring for you

Your camera lens or Padcaster bracket should have a marking to indicate the diameter. The diameter (in mm) is next to the "Ø" symbol on a camera lens, and printed in white on a Padcaster pre-installed 58mm step-down ring. Once you find the lens diameter, choose from the nine included mounting rings, the one with the same mm diameter printed on it as your lens. The Parrot comes with Ø49mm, Ø52mm, Ø55mm, Ø58mm, Ø62mm, Ø67mm, Ø72mm, Ø77mm, and Ø82mm mounting rings. For smaller cameras we include three Adapter Rings: 37-58mm, 43-58mm and 46-58mm. These attach to the Parrot 58mm Mounting Ring.



4). screw mounting ring to camera lens or Padcaster bracket

Thread the mounting ring to the front of the camera lens. Avoid over-tightening the threads to prevent damaging them.



5). remove the hood cover

Gently pull on one of the bottom corners of the hood cover to remove it.



6). remove protective film and insert the smartphone

While supporting the hood with one hand use the other hand to pull down the phone clamp and hold it in place. Remove the thin protective film from the rubber grip pad inside the phone clamp. Slide the phone into place and carefully release the phone clamp to hold it in place.

Note: Failure to remove the thin protective film could cause your phone to slide out of the Parrot.



7). mount the teleprompter

Slide the Parrot Teleprompter hood assembly over the mounting ring until the retainer clip clicks in place.




8). download our free app at:

www.padcaster.com/parrot

Please refer to the instructions in the App section.



Padcaster Parrot Teleprompter screens

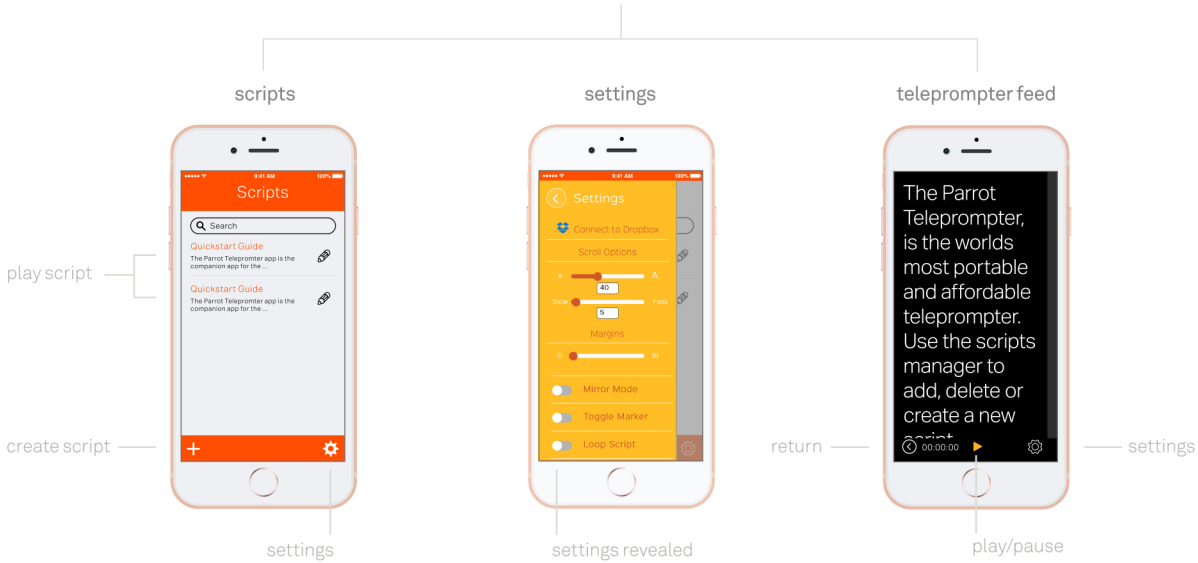

For more Assistance
www.padcaster.com/parrot

Important Product Information
 Before using the Padcaster Parrot Teleprompter, please read the terms located at: www.padcaster.com/parrot. Please also read the rules and policies for the Padcaster Parrot Teleprompter and services related to the Padcaster Parrot Teleprompter, including but not limited to the privacy notice located at: www.padcaster.com/parrot and any other rules or usage provisions accessible through the www.padcaster.com/parrot website. All terms, rules, notices, policies and provisions are, collectively, the "Agreements".

By using the Padcaster Parrot Teleprompter you agree to be bound by the terms of the "Agreements".

Warranty
 The Padcaster Parrot Teleprompter is covered by a One-Year Limited Warranty. Details are available at: www.padcaster.com/parrot